


ROCK-GUARD KIT

INSTALLATION INSTRUCTIONS

It is suggested that the rock guard fins be installed on the cutting platform using the staggered manner shown on the bottom of this page. This allows soybeans to freely enter the feeder house while at the same time preventing rocks from doing the same. We have found that the staggered method is far superior to a solid pipe or roll of material that prevents beans from entering the feeder house.

The longer fins should be on the front row installing them 4 to 6 inches behind the sickle bar. It does not matter how the fins are installed with the angle open to the front of the combine or the rear. Install the rear (shorter) fins about 4 to 6 inches behind the front fins and make certain that the ends of the front fins overlap the ends of the rear fins by at least 2 inches to prevent rocks from entering the feeder house.

To install the rock guard fins, lay all the fins out on the platform as per the instructions above. Install each fin to the feather sheets with at least 4 to 6 of the included pop rivets.

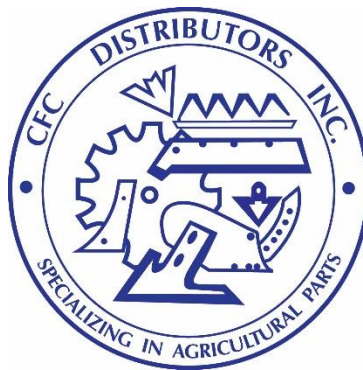

CFC Distributors, Inc.

www.cfcdist.com

800.548.6633